


Special Usage for RS4232-4 Box

- 1. Standard usage :** four port card use A640 Cable to connect with RS4232-4 Box directly. Support four ground isolated RS232/RS422/RS485 interface.

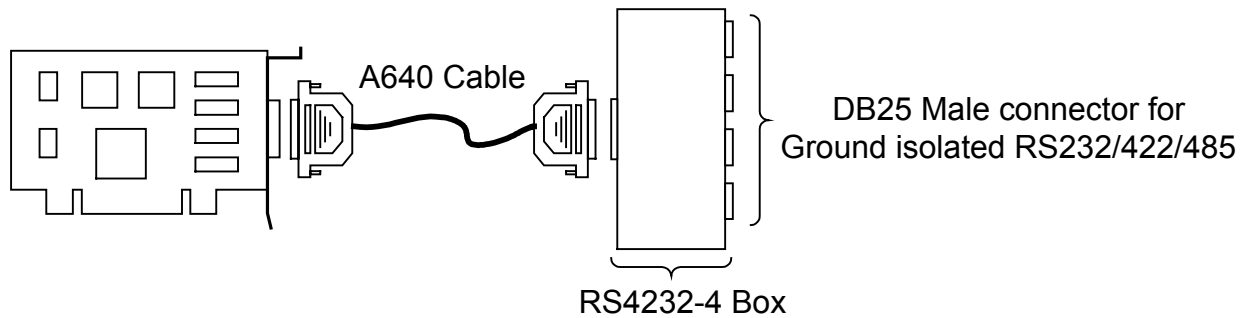

- 2. Special usage :** A401 Cable or P486 Cable to connect with RS4232-4 Box. Support any RS232 device to have ground isolated RS232/RS422/RS485 interface.

- ※ A401 Cable support four DB25 DCE type female connector.
- ※ P486 Cable support four DB9 DCE type female connector.

